

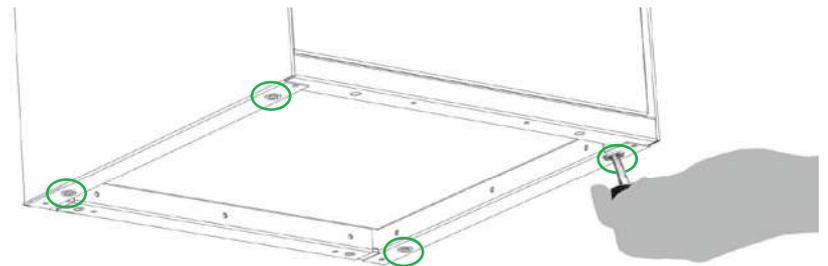


INDEX

Plastic feet joint instructions	pag. 2
Fixing system to the ground	pag. 3
Bag-holder ring system use instructions	pag. 4
Rainhood joint instructions	pag. 5
Instructions to make recycling stations	pag. 6
Plastic wheels joint instructions	pag. 7

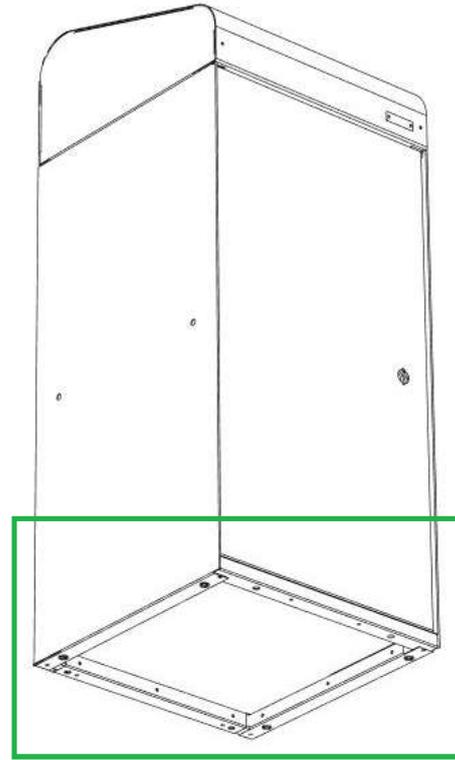


While somebody holds the bin tilted, feet are screwed into the indicated holes with the hand till the end

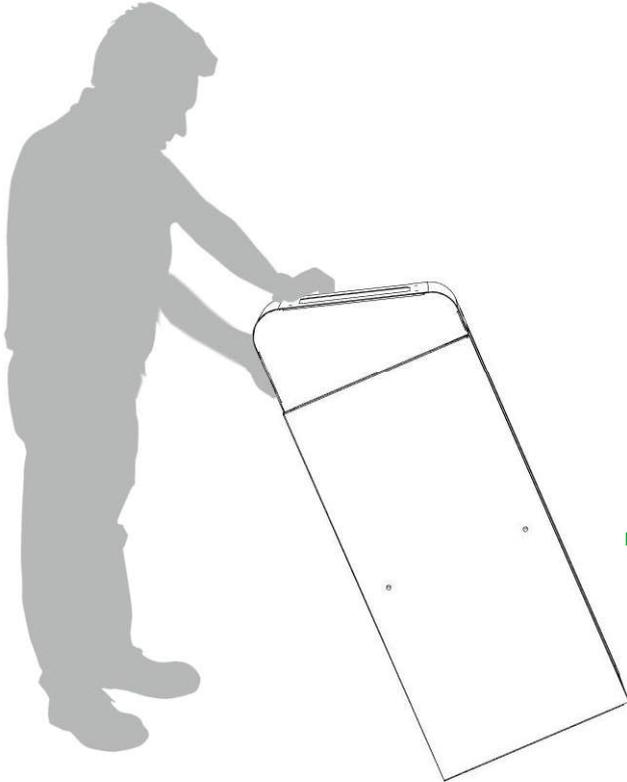


Berlin 1 waste

Berlin 1/2 W - 4 x 

Berlin 3 W - 6 x 

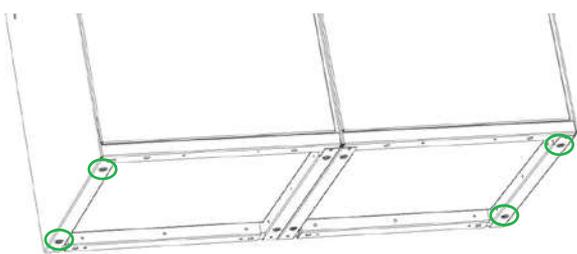

Berlin 2 wastes


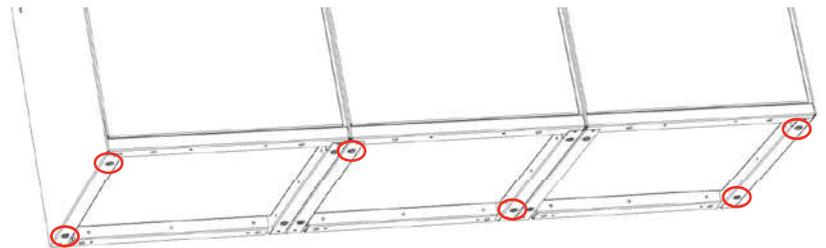


Berlin 3 wastes


Optionally can be installed to the ground from the inside with 4 M6 expanding bolts.




To this operation is necessary make 4 holes on the floor of diameter 9 mm through the 4 holes at the bottom of bin or according to the following plans. To finally insert M6 expanding bolts through these holes, at the front hole introduce the expanding bolt till the second hole, don't put on the base surface. Use a hex wrench N° 10, screw the set firmly.

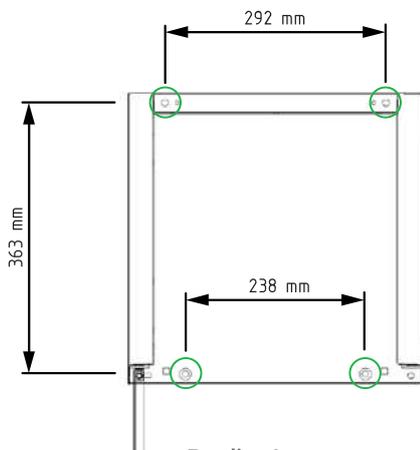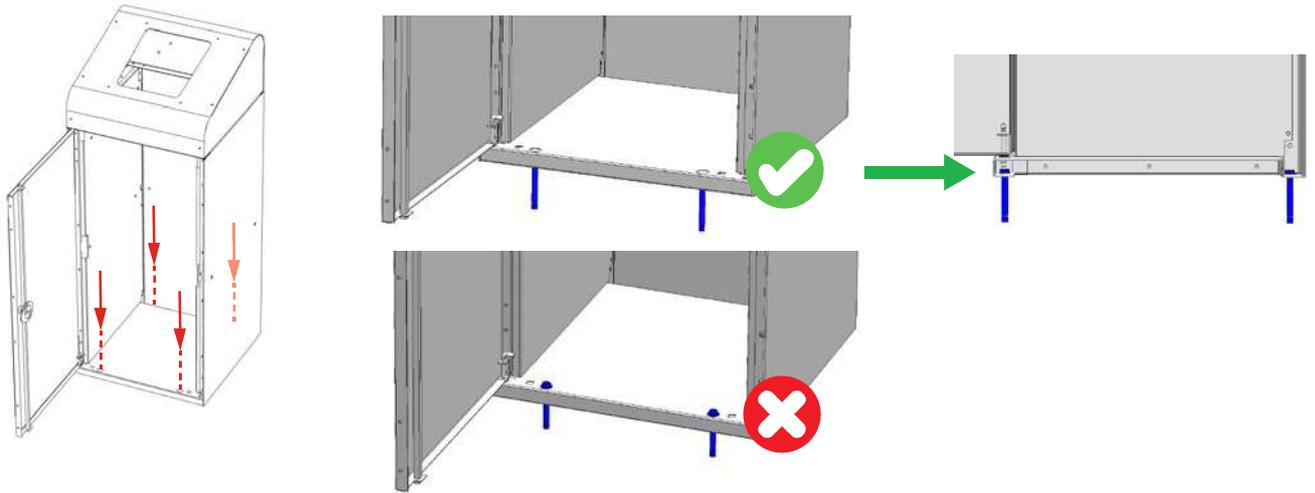

Berlin 1 waste

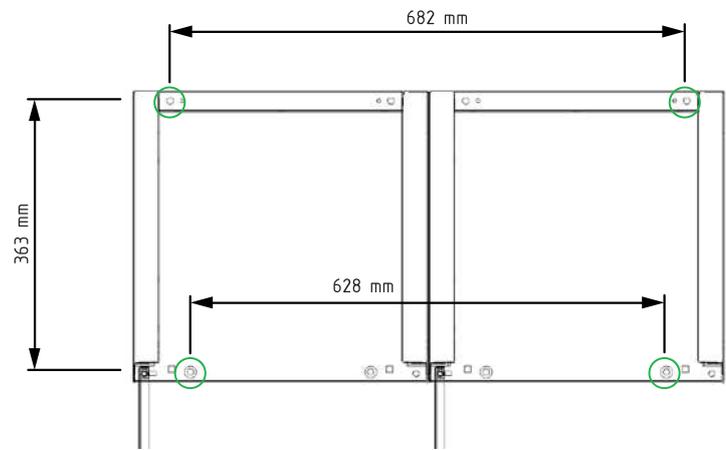

Berlin 2 wastes

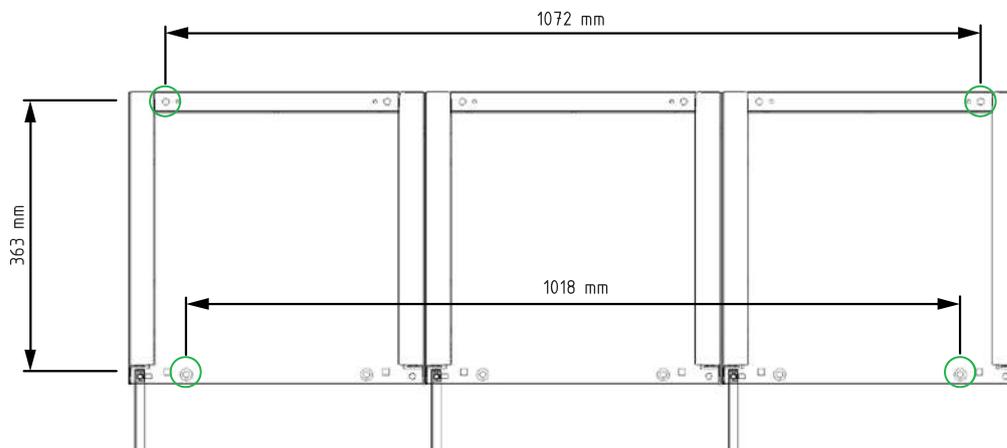

Berlin 3 wastes

To have a good use from the bag-holder ring, need follow this recommendations when you replace the bag for a new bag.

- Use an appropriate sized bag from 80 - 100 litres.

- 1st - Open the door
- 2nd - Pull to extract totally the bag-holder ring
- 3rd - Release the rubber band
- 4th - Surround bag-holder ring with the bag




The piece of bag which hangs on the outside of the ring mustn't be excessive. It mustn't cover the slides



- 5th - Then placed the rubber band hugging the bag
- 6th - Push to close till the end the bag-holder ring and finally close the door and the lock.

Use the screws to join the rainhood through the holes.

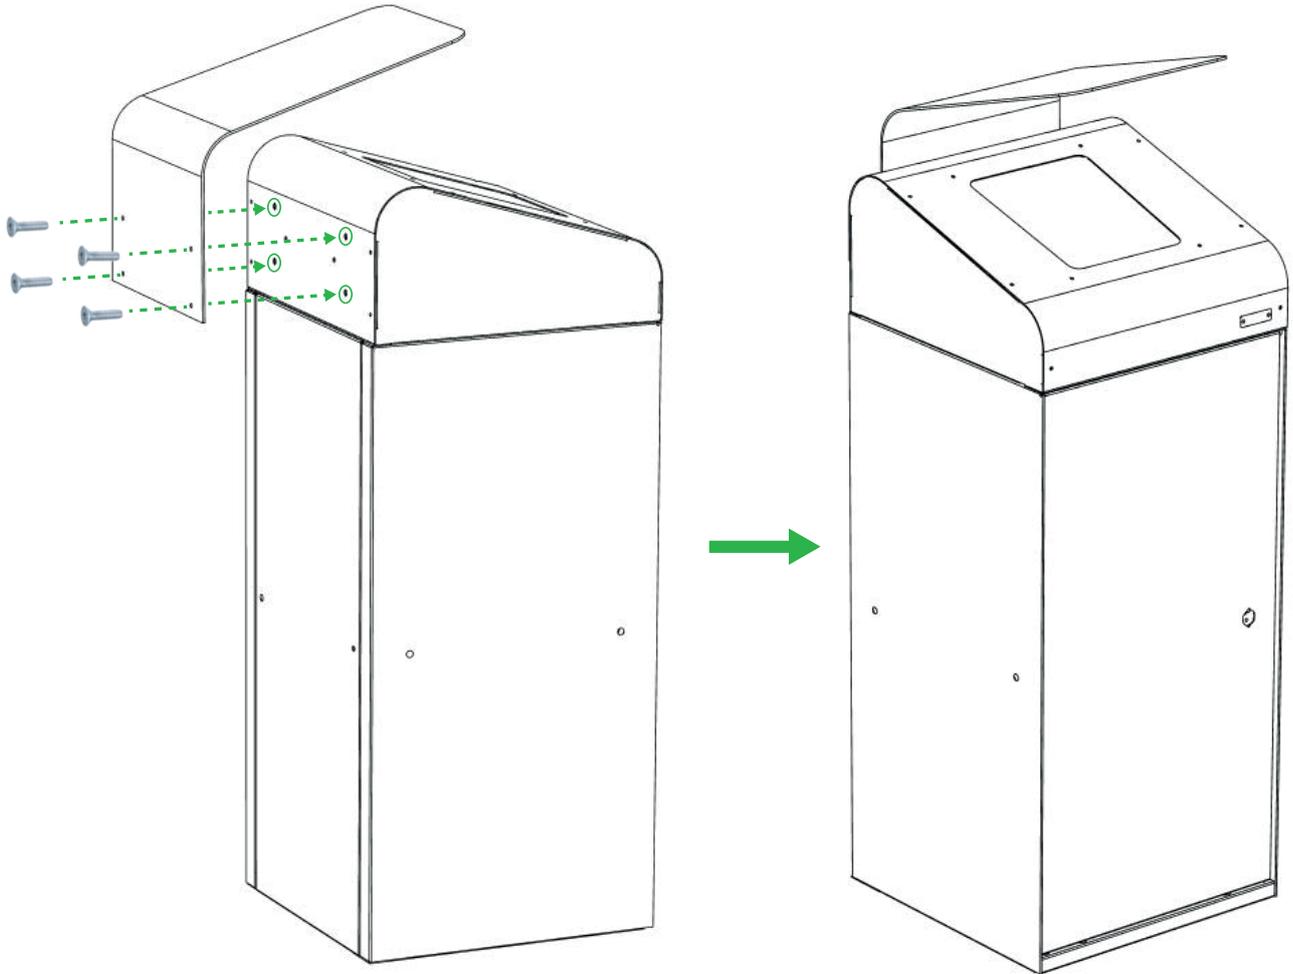


4 x



To join two bins between them:

1st - Open two doors, one beside the other one



2nd - Screw them through the indicated holes from inside both bins, in the same direction of the picture

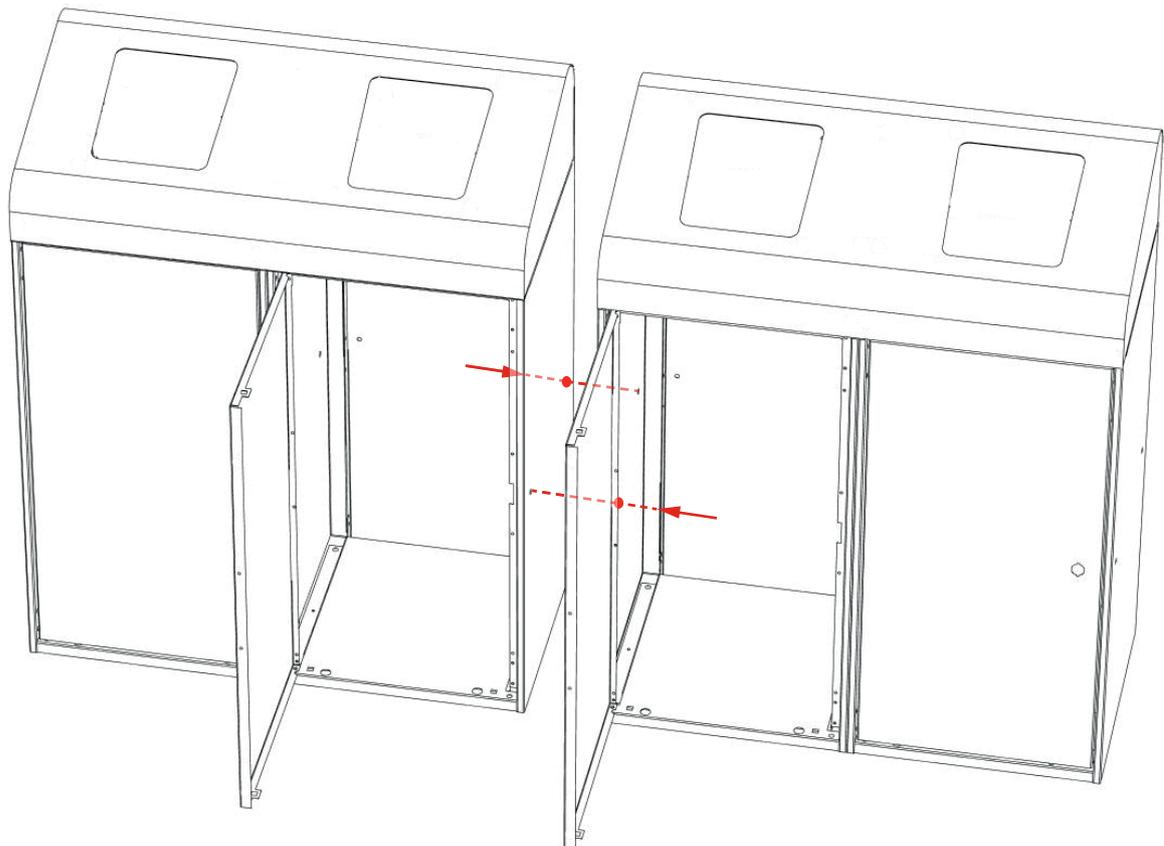

2 x



While somebody holds the bin tilted, wheels are screwed into the indicated holes with the hand till the end

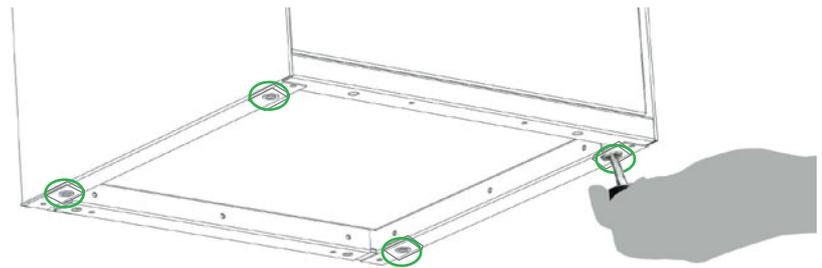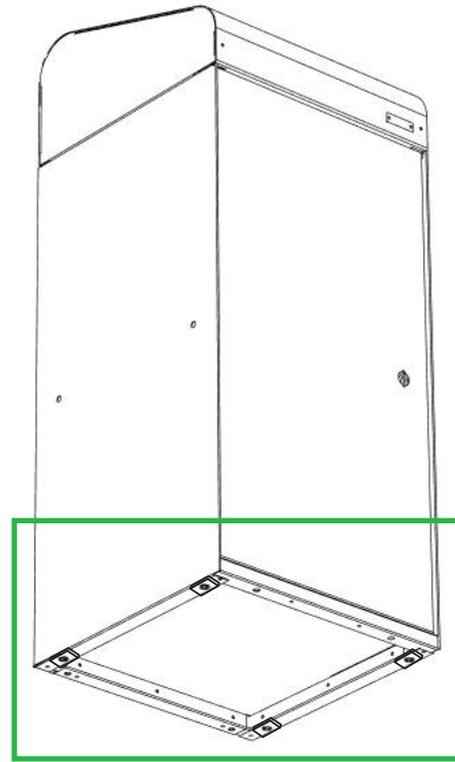


Berlin 1 waste


Berlin 1/2 W - 4 x



Berlin 3 W - 6 x

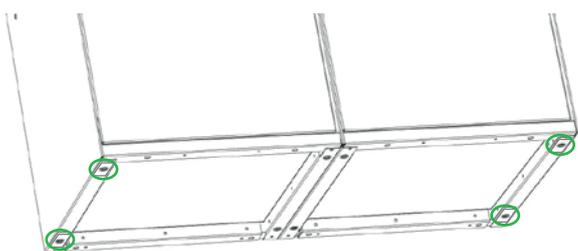

Berlin 2 wastes

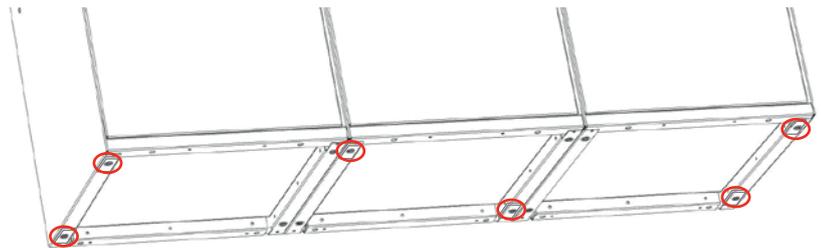

Berlin 3 wastes